


LOXONE RELAY OUTPUT

Pulse/Impulse
500ms

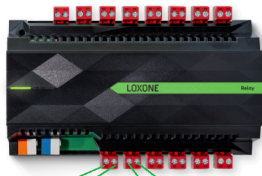


SW - SW
PIEZO 1 11 12 SW - SW
PIEZO3 3 4

COLOR CHANGE
FARBE WECHSEL
KLEUR WIJZIGEN


ON/OFF
AN/AUS
AAN/UIT

PIEZO 3 LED 12Vdc - 3 2 +
PIEZO 3 Switch sw 3 4 sw
PIEZO 2 LED 12Vdc - 5 6 +
PIEZO 2 Switch sw 7 8 sw
PIEZO 1 LED 12Vdc - 9 10 +
PIEZO 1 Switch sw 11 12 sw
DMX G (phased) G 13 14 G
DMX - in/out - 15 16 -
DMX + in/out + 17 18 +
24V - dc in/out - 19 20 -
24V + dc in/out + 21 22 +


DMX
CABLE
110ohm

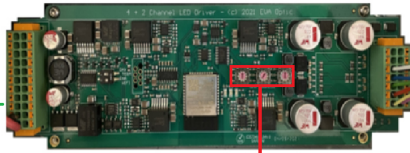

MASTER 605

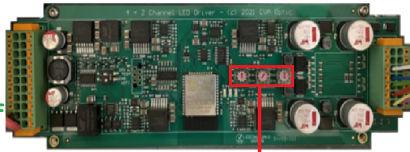

SLAVE 001

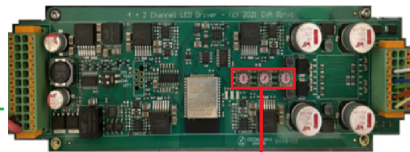


SLAVE 001 (ALL/ALLE)

Sequences scenes / Sequenz Szenen


White / Sky Blue / Blue / Mediterranean / Green / Red / Purple / Colour Show Fade / Colour Show Jump
Weiss / Himmelblau / Blau / Mediterran / Grün / Rot / Lila / Farbshow Fade / Farbshow Jump

LOXONE DMX EXTENTION

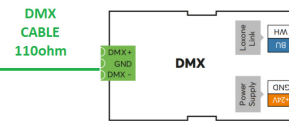


PIEZO 3 LED 12Vdc - 3 2 +
PIEZO 3 Switch sw 3 4 sw
PIEZO 2 LED 12Vdc - 5 6 +
PIEZO 2 Switch sw 7 8 sw
PIEZO 1 LED 12Vdc - 9 10 +
PIEZO 1 Switch sw 11 12 sw
DMX G (phased) G 13 14 G
DMX - in/out - 15 16 -
DMX + in/out + 17 18 +
24V - dc in/out - 19 20 -
24V + dc in/out + 21 22 +

DMX
CABLE
110ohm

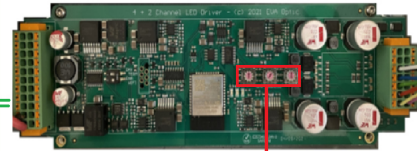

SLAVE xxx

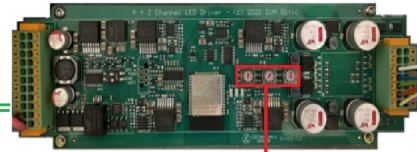

SLAVE xxx



SLAVE xxx

SLAVE xxx: ADDRESS IS START ADDRESS OF DMX PROGRAM,
ASK PROGRAMMER

ADRESSE IST STARTADRESSE DES DMX-PROGRAMMS,
PROGRAMMIERER FRAGEN